

# Cool Cube™ 03 at Lab Freezer Temps (Varicella, MMRV, Zoster & FFP)

**Model:** FT-03




The Cool Cube™ 03 at Lab Freezer Temperatures is not an ordinary transport cooler. It is an easy-to-carry, qualified container and pack-out system that keeps temperature sensitive product (varicella, MMRV, zoster, Fresh Frozen Plasma) frozen between -50° and -15°C for over 2.5 days – without using ice or electricity! This cooler is ideal for transport, but also excels at protecting valuable product during off-site use and power outages, regardless of hot conditions. The simple, validated, patented technology is the best compact thermal protection product available to maintain the cold chain!




## Qualified Pack-Out System


**Remove**  
PCM Panels

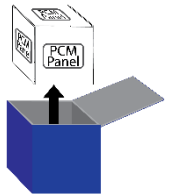


**Prep**  
PCM Panels

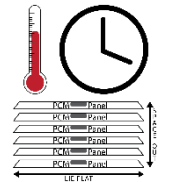

**Assemble**  
PCM Panels

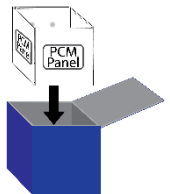

**Pack-Out**  
Product

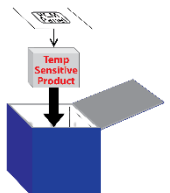

**Close**  
Bag



### Features

- 6 patented PCM panels manage the temp
- Temp-Shield™ vacuum insulated panel (VIP) system
- Rugged, blue carrying case with a shoulder & hand strap
- Validated under ISTA Test Procedure 7D (Int'l Safe Transit Assoc)

### Specifications

*Temperature Range*  
-50° to -15°C (-58° to 5°F)

*Performance*  
62+ Hours

*Payload Area*  
5¾" x 5¾" x 5¾"

*Exterior Dimensions & Weight*  
11" x 11" x 11" @ 14lbs

- 1 Adjustable shoulder strap with pad is removable.
- 2 Double zipper closure for easy access.
- 3 Clear external pockets for documents and/or Digital Data Logger (DDL).
- 4 Six removable, temperature-controlling, PCM panels ensure a simple, quick & effective pack-out.

[Go to Web Page >>](#)



info@VeriCorMed.com  
(866) 469-6019

For more information & pricing: [www.VeriCorMed.com](http://www.VeriCorMed.com)

