

# Cool Cube™ 03 at Refrigerator Temps (Vaccine & Medicine)

Model: VT-03




The Cool Cube™ 03 at Refrigerator Temperatures for Vaccine & Medicine is not an ordinary transport cooler. It is an easy-to-carry, qualified container and pack-out system that keeps temperature sensitive product (fresh vaccine, medicine) chilled between 2° and 8°C for over 2.5 days – without using ice or electricity! This cooler is ideal for transport, but also excels at protecting valuable product during off-site use and power outages, regardless of hot or freezing conditions. The simplified, validated, patented technology is the best compact thermal protection product available to maintain the cold chain!




## Qualified Pack-Out System


Remove PCM Panels

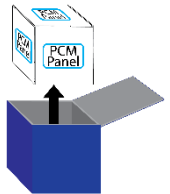


Prep PCM Panels

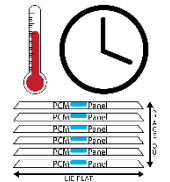

Assemble PCM Panels

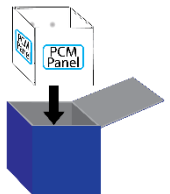

Pack-Out Product

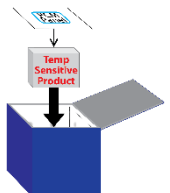

Close Bag



- 1 Adjustable shoulder strap with pad is removable.
- 2 Double zipper closure for easy access.
- 3 Clear external pockets for documents and/or Digital Data Logger (DDL).
- 4 Six removable, temperature-controlling, PCM panels ensure a simple, quick & effective pack-out.

### Features

- 6 patented PCM panels manage the temp
- Temp-Shield™ vacuum insulated panel (VIP) system
- Rugged, blue carrying case with a shoulder & hand strap
- Validated under ISTA Test Procedure 7D (Int'l Safe Transit Assoc)

### Specifications

- Temperature Range*  
2° to 8°C (36° to 46°F)
- Performance*  
65+ Hours
- Payload Area*  
5¾" x 5¾" x 5¾"
- Exterior Dimensions & Weight*  
11" x 11" x 11" @ 11lbs

Go to Web Page >>



info@VeriCorMed.com  
(866) 469-6019

For more information & pricing: [www.VeriCorMed.com](http://www.VeriCorMed.com)

